



1. Take off the upper large cover.

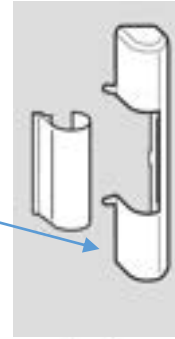

2. Turn the window handle 90° and leave it in the open position. Leave the sash closed.

3. The hinge fixing pin must be pulled out to the bottom.

(if necessary, the pin can be pushed down from the top)



4. We fold the top of the window sash inwards.

5. We lift the sash up until the bottom pin is completely out  $\approx 6$  cm.



Inserting the sash is done in the opposite order. It is important to keep the sash in the maximally closed position when pulling out and inserting the upper pin.

